



















ALUMINUM DOOR HANGING SLIDING ROLLER





Accessory List:

Accessories	Quantity (PCS)	Accessories	Quantity (PCS)
Outside rollers 	1	Inside rollers with damper 	1
Inside rollers 	1	Outside rollers with damper 	1
Belt fixing part 	1	Damper stopper 	2
Linkage runner guider 	2	M4*6 screw 	2
Transmission belt 12 meter 	1	Down guider 	2
ST3.5*12 cross countersunk head tapping screws 	4	Anti-slip off part 	4
2mm allen key 	1	M4*12 inner hexagon screw 	8
2.5mm allen key 	1	3mm extended allen key 	1
4mm allen key 	1		

Function	Door width	Single door loading capacity	Door thickness	Installation	Installation
Double soft close	530mm ~1200mm	60-100Kg	35-60mm	Top install with side hanging plate	

Fixed door accessories are optional

1、Door Dimension

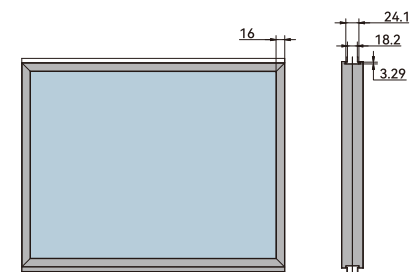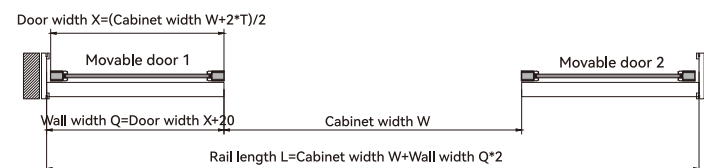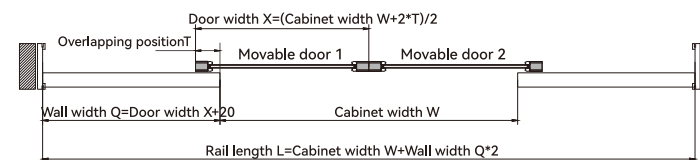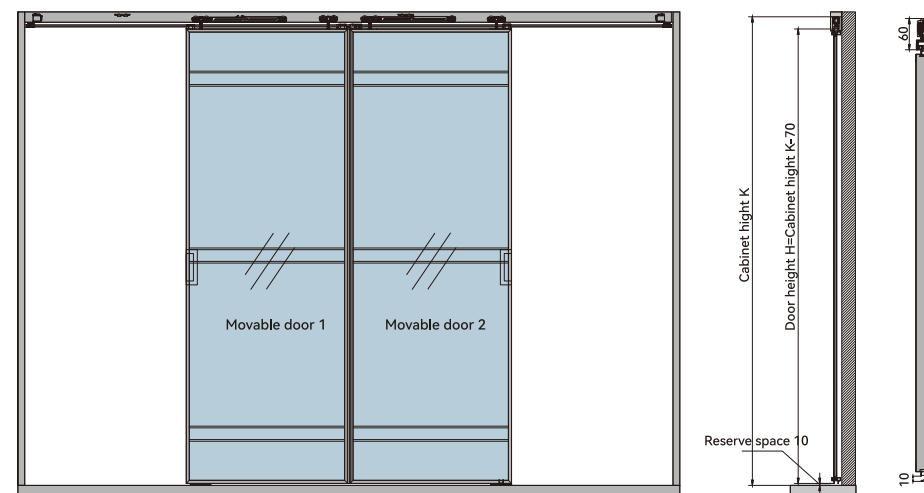


2. Rail accessory assembling

- 1、 Insert the incongruous synchronous rollers, damper stoppers and rollers into the rail in sequence, as shown in the picture. Door stoppers put in each end of track while rollers in the middle. Make sure that there are no impurity or aluminum scraps in the rail before installation.
- 2、 Pull the rollers manually. If there's no abnormal noise, fix the rail to the ceiling with self-tapping screws.




3.Linkage belt assembling

Pass the synchronous belt through the incongruous gearing wheel at both ends of the upper rail and plastic part on the hanging box, and connect the two ends of belt through the belt fixing part. The belt fixing part must be locked with 2 mm inner hexagon screw through M4*4 screws, the belt fixing part is fixed to the hanging box through M4*6 screw without any looseness.

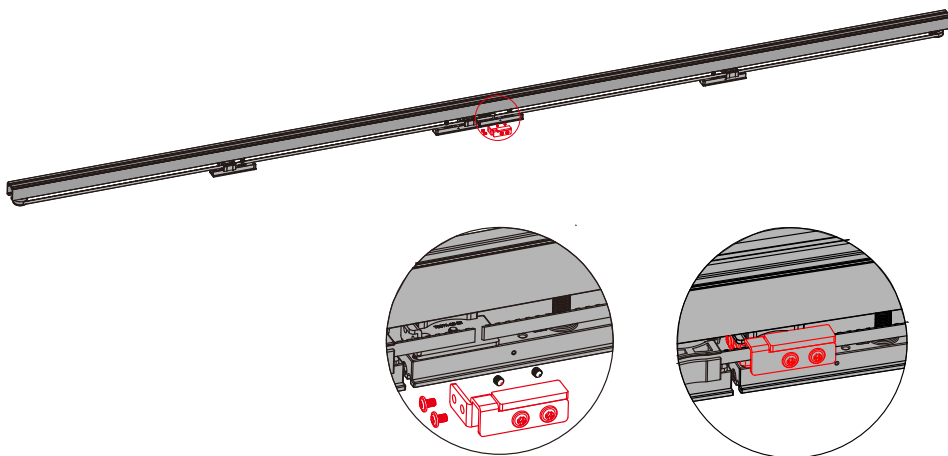

4.Door accessory assembling

Refer to the required dimension in picture, put the anti-slip parts into the door, tighten screw to fix them.

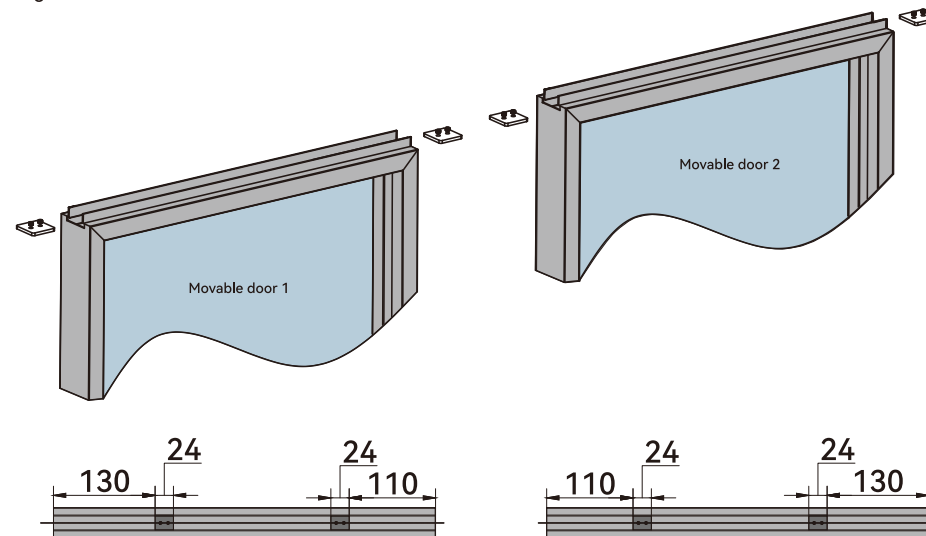


5.Door assembling

Fix top installed hanging plate from the side of the mounting plate through M4*12 inner hexagon screw by 2.0 inner hexagonal wrench, fixed the screw without any looseness.

6.Down guider assemble instuction

After the door is installed, close the doors and move the door to the middle, install the down guider wheel as shown in the picture..

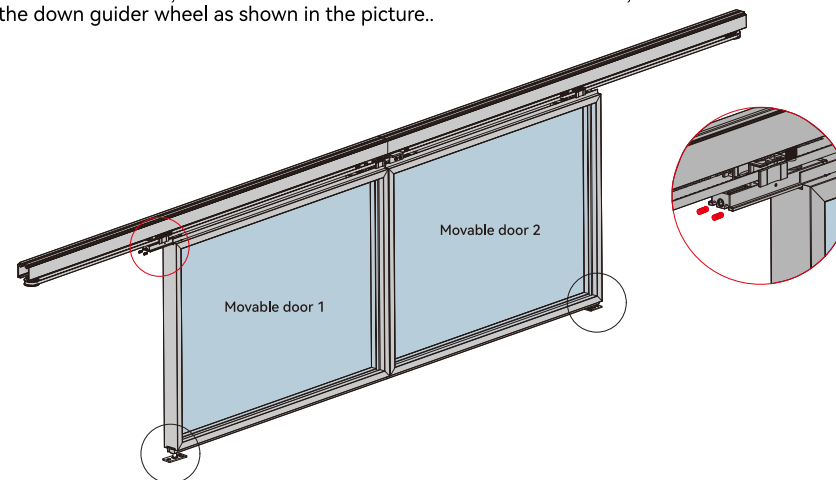

7.Fixed Top belt hanging plate

Open the doors and move the door to the both sides, insert the belt into the slot of the Inside rollers, fixed the belt with screwdriver.

